

## Simplified Gateman WV200 User Instruction

### 1. Registering user PIN Codes

Step 1: Press "R" button under the battery Cover

Step 2: Enter a code of 4~12 digits using the PIN pad

Step3: Press the "R" button to finish the registration

Step4: Check your PIN codes operation

Note: Keep the door open while you register the PIN codes to prevent yourself from accidentally getting locked out.

### 2. Registering Card Keys

Step 1: Press "R" button under the battery Cover

Step 2: Contact all the card keys you wish to register on the [ card key reader ] one by one

Step3: Press the "R" button to finish the registration

Step 4: Check the card key operation

Note: If you lose your current card key, register all the remaining keys to invalidate the lost key.

### 3. Locking The Door From the Outside

#### 3.1 Automatic Lock Mode

The automatic lock sensor detects the door closing and locks the door automatically within 5 seconds.

#### 3.2 Manual Lock Mode

The door locks when touching the keypad with the palm

### 4.Unlocking The Door From The Outside

#### 4.11 With PIN codes

Step 1: Touch the keypad with the palm

Step 2: Enter your PIN codes

Step 3: Press \* to unlock

#### 4.22 With card key

Contact the card key on the [ card key reader ]

### 5. Automatic/Manual Lock Mode

Automatic locking sensor detects the door closing and automatically locks the door in

5 seconds. Automatic lock mode is a factory default setting.

#### 5.11 Setting it on automatic lock mode

Step 1: Enter your PIN codes using the PIN pad

Step 2: Press " R " button under the battery Cover

Step 3: Enter 4 # 2 # 1 # \* to finish the setting

Step 4: Check automatic lock mode operation

#### 5.22 Setting it on manual lock mode

Step 1: Enter your PIN codes using the PIN pad

Step 2: Press " R " button under the battery Cover

Step3: Enter 4 # 2 # 3 # \* to finish the setting

Step4: Check manual lock mode operation

### 6. Volume Control

#### 6.11 Silent Mode

Step 1:: Enter your PIN codes using the PIN pad

Step 2:: Press " R " button under the battery Cover

Step3:: Enter 4 # 3 # 3 # \* to finish the setting

#### 6.22 Normal Mode

Step 1:: Enter your PIN codes using the PIN pad

Step 2:: Press " R " button under the battery Cover

Step3:: Enter 4 # 3 # 2 # \* to finish the setting

#### 6.33 Loud Mode

Step 1: Enter your PIN codes using the PIN pad

Step 2: Press " R " button under the battery Cover

Step 3: Enter 4 # 3 # 1 # \* to finish the setting

### 7. Change Modes

#### 7.1 From Normal Mode to Master Mode

Step 1: Enter your PIN code using the PIN pad

Step 2: Press "R" button under the battery Cover

Step 3: Enter 4# 1# Master Code# Master Code again "R"

#### 7.2 How to register User PIN Codes under Master Mode

Master code- "R" 2# 1# UN # U # \*

UN: User Number(2 digits) 01-30

U: User PIN Code

#### 7.3 From Master Mode to Normal Mode

Master Code -"R" 6# 1# PIN Code# PIN Code again "R"

### 8.Change Language( Only WS 200 )

#### 8.1 Change to Korean

Enter PIN code -Press "R" 4 # 5# 1 # \*

#### 8.2 Change to Chinese

Enter PIN code -Press "R" 4 # 5# 2 # \*

#### 8.3 Change to English

Enter PIN code -Press "R" 4 # 5# 3 # \*